


# HOW TO USE THE ELECTRIC HOB

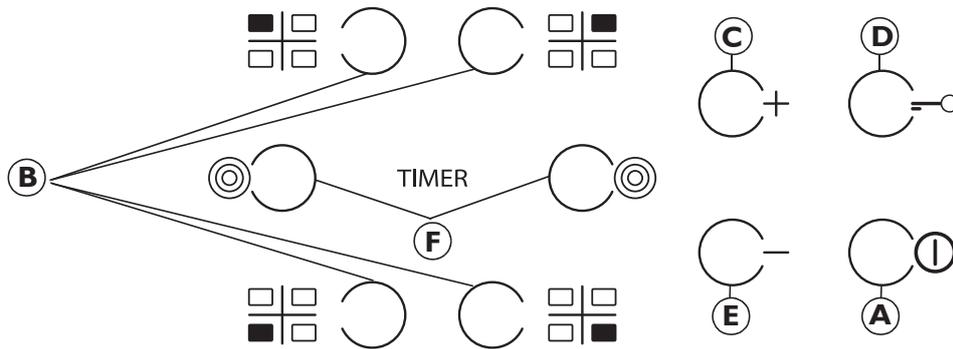

<b>A</b>	On/Off	<b>D</b>	Key lock
<b>B</b>	Cooking zone and timer selection	<b>F</b>	Multiple zone Activation/Deactivation (if present)
<b>C-E</b>	Heat setting increase and decrease		

- 1 If needed, unlock the hob by pressing and holding the key button (D). An acoustic signal will sound and the corresponding led will turn off.
- 2 Press one of the buttons "B" corresponding to the cooking zone you intend to use.
- 3 To select the heat setting required, use the buttons "E" or "C" to increase or decrease the power. **IMPORTANT:** the control is deactivated 10 seconds after the heat setting has been selected. To change the heat setting, first press the selection button "B" again, then proceed to change the setting, using buttons "E" or "C".

**MULTIPLE ZONE:** After selecting the desired zone and setting the level (as described in the previous section) press "F": an indicator above the button turns on, activating the additional zone.

## RESIDUAL HEAT INDICATOR

When the cooking zone is switched off, the residual heat indicator "H" remains on or flashes alternating with "0" until the temperature of the hob returns within safety levels.

