


HOW TO TURN ON THE TV

1. Turn on the TV with the button ON/OFF TV (see below)
2. Turn on the Decoder with the button ON/OFF Proximus (see below)

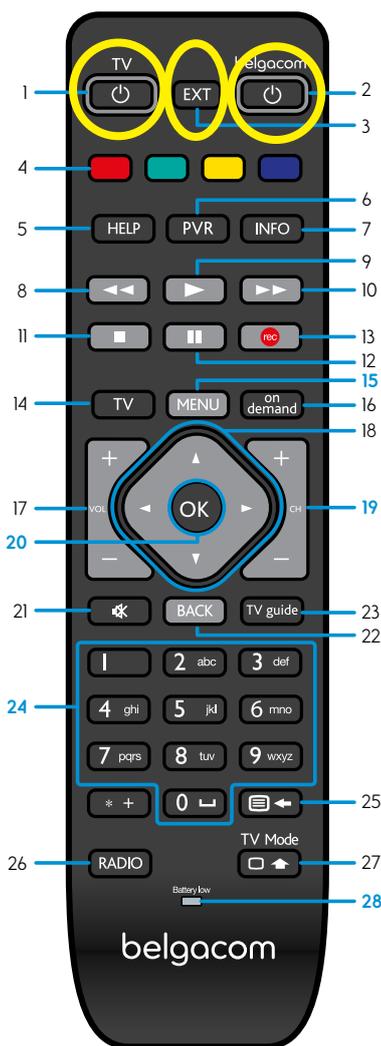

1. Switch your TV set on/off.
2. Switch your Belgacom TV decoder on/off.
3. Select an external source for your TV set.
4. Access the on-demand content of the channel you are watching (if available).
5. Access the help section.
6. Access your recordings.
7. Access the information bar of the TV program underway.
8. Rewind the TV program underway.
9. Play.
10. Fast-forward the TV program underway.
11. Stop.
12. Pause a TV program.
13. Record the program underway.
14. Access the channels.
15. Access the main menu.
16. Access the on-demand catalog.
17. Increase/lower the volume.
18. Navigate in the menus (left, right, top, bottom).
19. Change the channel / navigate in the menus (page by page).
20. Validate your selection.
21. Switch off the TV sound.
22. Return to the previous action.
23. Access the program grid.
24. Select a channel / enter text.
25. Display teletext / remove text.
26. Access the radio stations.
27. Gives access to the functions of your TV set. Press another key on the remote control at the same time.
28. Battery status indicator.


3. Nothing displayed? Check the source.

If the Proximus TV screen doesn't appear, use the key EXT to select an external source for your TV, which connects to your Belgacom TV decoder. You can do this using the AV, Aux, EXT, or HDMI button on your remote control.

COMMENT ALLUMER VOTRE TV

1. Allumer la TV grâce au bouton ON/OFF TV (voir schéma)

2. Allumer le Décodeur grâce au bouton ON/OFF Proximus (voir svchéma)

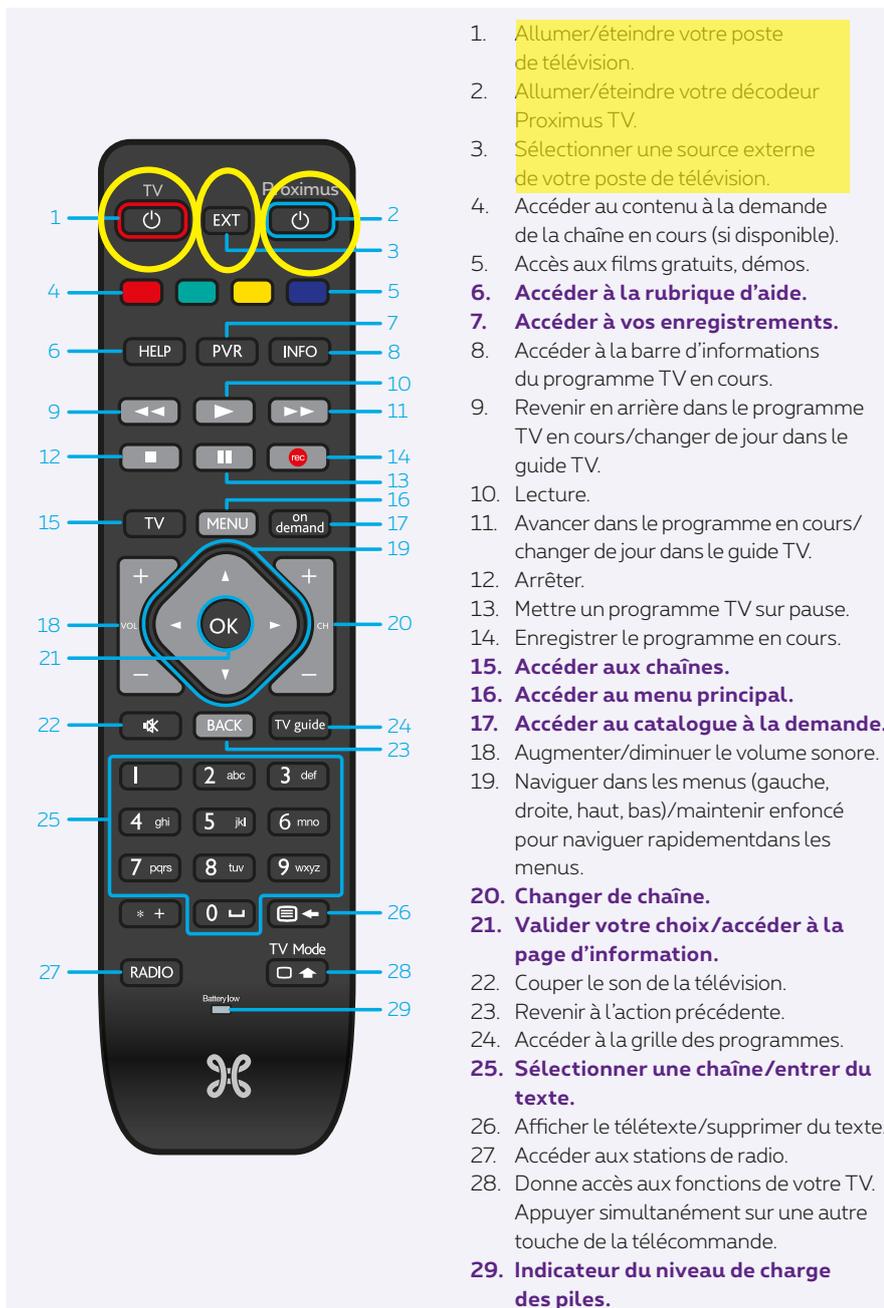

3. Aucune chaîne n'apparaît? Vérifiez la source.

L'écran Proximus TV n'apparaît pas?

À l'aide de la touche EXT, sélectionnez une source extérieure à votre télévision, source à laquelle est connecté votre décodeur Belgacom TV. Vous pouvez effectuer cette opération en utilisant le bouton AV, Aux, EXT, HDMI sur la télécommande de votre télé.