


# HOW TO USE THE ELECTRIC HOB

SYMBOLS: **ON/OFF key** 

Turns the hob on or off.

**Control lock button** 


Activates or deactivates the control lock if pressed for 3 seconds.

**Increase key** 

Increases the power level or cooking time.

**Decrease key** 

Reduces the power level or cooking time.

**Timer key** 

Activates the timer for the automatic shut-down.

## Cooking zones


 Front left


 Rear left



 Central

 Rear right

 Front right

 Front (30 cm model only)

 Rear (30 cm model only)

 or  indicate that the cooking zones beside them are multiple.

- 1 Using the cooking hob:** All the appliance's control and monitoring devices are located together on the front panel. The hob is controlled by means of the Touch Control sensor buttons. The power in the cooking zones can be adjusted to various levels. Lightly touch a symbol on the glass ceramic surface. The buzzer will sound to confirm every effective touch.
- 2 Switching on the cooking hob:** To switch on the hob, hold down the ON/OFF key for at least 3 seconds. If no function is activated within 30 seconds of switching on, the hob switches off automatically.  
  
If the "control lock" function is active, after pressing the ON/OFF key for 3 seconds the display shows the text B L O C or B L (depending on the model), press the Control lock key for at least 3 seconds.
- 3 Switching on a cooking zone:** After switching on the hob, use the Increase keys (+) to activate the required cooking zone. The display shows the symbol o.. Press the Increase key (+) again. The display shows the symbol 9 or P (depending on the model) to indicate that the cooking zone is on at the maximum power. Press the Increase (+) and Decrease key (-) to increase or decrease the required power level.

